



**User Guide** 

## 1) Getting started!

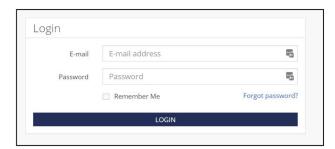

Create an account on the platform:

• Enter your email address and create a password

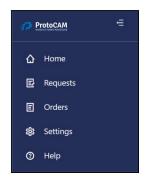

On the **menu** you will be able to find your orders and requests



If you click on "settings" you will be able to manage your account: change your address book and password



## **Additive Manufacturing**

User Guide

## 2) Creating an order




Once you are ready to start

- Select the **unit of your model** (mm or inch)
- Click on "Upload 3D model" to upload your file(s) or drag it/them directly in the platform



Name the project to track through the ordering process.

- Change the quantity if needed
- By clicking on "new item" you can add other files to your order

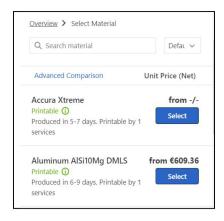


Select a material from the list of materials


- If you click on "advanced comparison" you can compare the material characteristics between each other.
- You can also use the search bar to search for a specific material



# Additive Manufacturing User Guide

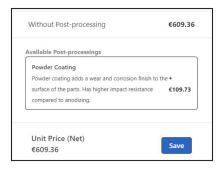

Select a post processing if needed and click "save"

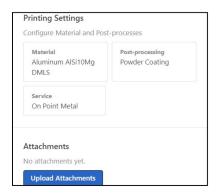


If you click on **"Upload Attachments"** you can add part documents as attachments to help clarify the design or specifications.



If you click on the **options** of the model, you can repeat the production selection across all models or even clone the model




User Guide

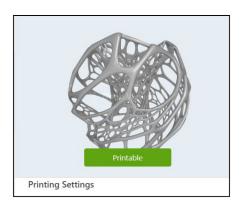


The platform will automatically confirm **3D model's Printability** 

To review the model in detail click on the miniature to access the 3D Model Viewer.

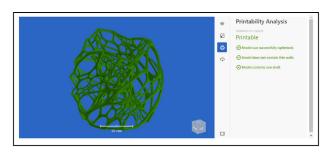

Any Suspicious Areas of the 3D model will be shown colored in the viewer.


By clicking on **Parameter** you can adjust the size and see details of the analysis.

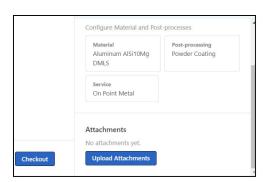

Review the **Order Summary** in the right column and click on check out




User Guide

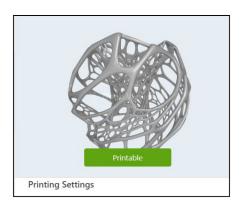


The platform will automatically confirm **3D model's Printability** 

To review the model in detail click on the miniature to access the 3D Model Viewer.

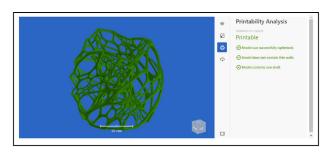

Any Suspicious Areas of the 3D model will be shown colored in the viewer.

By clicking on **Parameter** you can adjust the size and see details of the analysis.

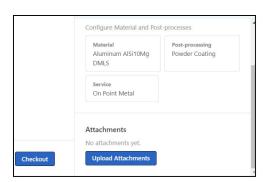

Review the **Order Summary** in the right column and click on check out